

Active Display Setup Instructions

1. Unpack display
2. Install speaker models as shown below
3. Place speaker selector on the lower shelf
4. Place receiver and source on lower shelf
5. Wire each speaker to the speaker selector.
6. Connect the speaker selector to the receiver.
7. Adhere the two part, two color logo decal at top as shown below.
8. If including freestanding speakers, place F300T and F300R to the sides of the display with F300R's on stands.

NOTE: Make sure to connect each speaker to the correct number on the speaker selector as indicated below.



 **Destination Audio**
Audio Products That Complement Your Life.™

382 Marshall Way, Layton, Utah • USA • 84041 • Toll Free: (800) 543-2205 • Fax: (801) 543-3300 • www.destinationaudio.com

It is Destination Audio policy to continuously incorporate improvements into products; all specifications are subject to change without notice. Copyright © 2009 Destination Audio. All Rights Reserved.